

2D Barcode scanner

Simple manual

Version: V4.1.2 7#

Product Introduction

This simple user's manual is designed for 2D barcode scanner. For detailed usage manual information, please get the complete user manual from our dealer.

(● default setting)

System Settings



Factory Default



Version information

DATA Interface



● USB



RS232



USB Virtual Com

(driver is needed for virtual serial port)

Terminal Character



No end



CR



● CR/LF



Tab

Volume setting



High



Middle



Low

Language



USA



French



Italy



Germany



Spain



Russia



Japan



Sweden

Language



Turkey Q



Turkey F



Finland



Brazil



Belgium



Portuguesa



Korea



Romania

Scan Mode



Manual



Automatic



ON

(Enable all default barcodes)



Inverse Code ON

(Enable read black&white inverse code)